

# SortMax™ Assembly Guide




## Step 1

Identify the dual-track system in the back, and the single-track system in the front.



## Step 2

On the side of the panel, the weld clip for the signage indicates the back of the container. The outside of the panel has a track for signage, while the inside of the panel is clean of tracks.

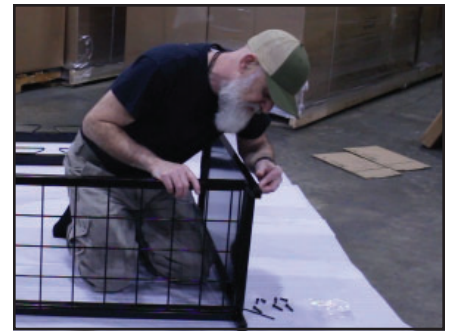

## Step 3

Lay the units on the ground and insert the 4 longer screws from the outside to attach the side panels to the bottom.



## Step 4

With the vertical wires facing inward, and the horizontal wires outward, place 2 grids loosely into the single, front channel and 2 grids loosely into the double back channels.

**IMPORTANT:** Vertical wires **MUST** be on the inner side.



## Step 5

Place the top over the wireframe grids, lining the dual track up with the back, and the single track in the front.



## Step 6

Screw in the top with the 4 shorter screws, from the inner side, and secure the top to the side panels.




## Step 7

Flip the entire unit upside-down, and insert the wheels.



## Step 8

Use a small tool and a hammer to push the wheels in all the way. Make sure not to hit the wheels with the hammer.

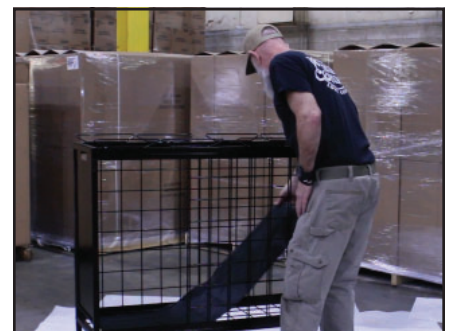

## Step 9

Return the SortMax to an upright position, and lay down the rubber drip mat in the bottom.